


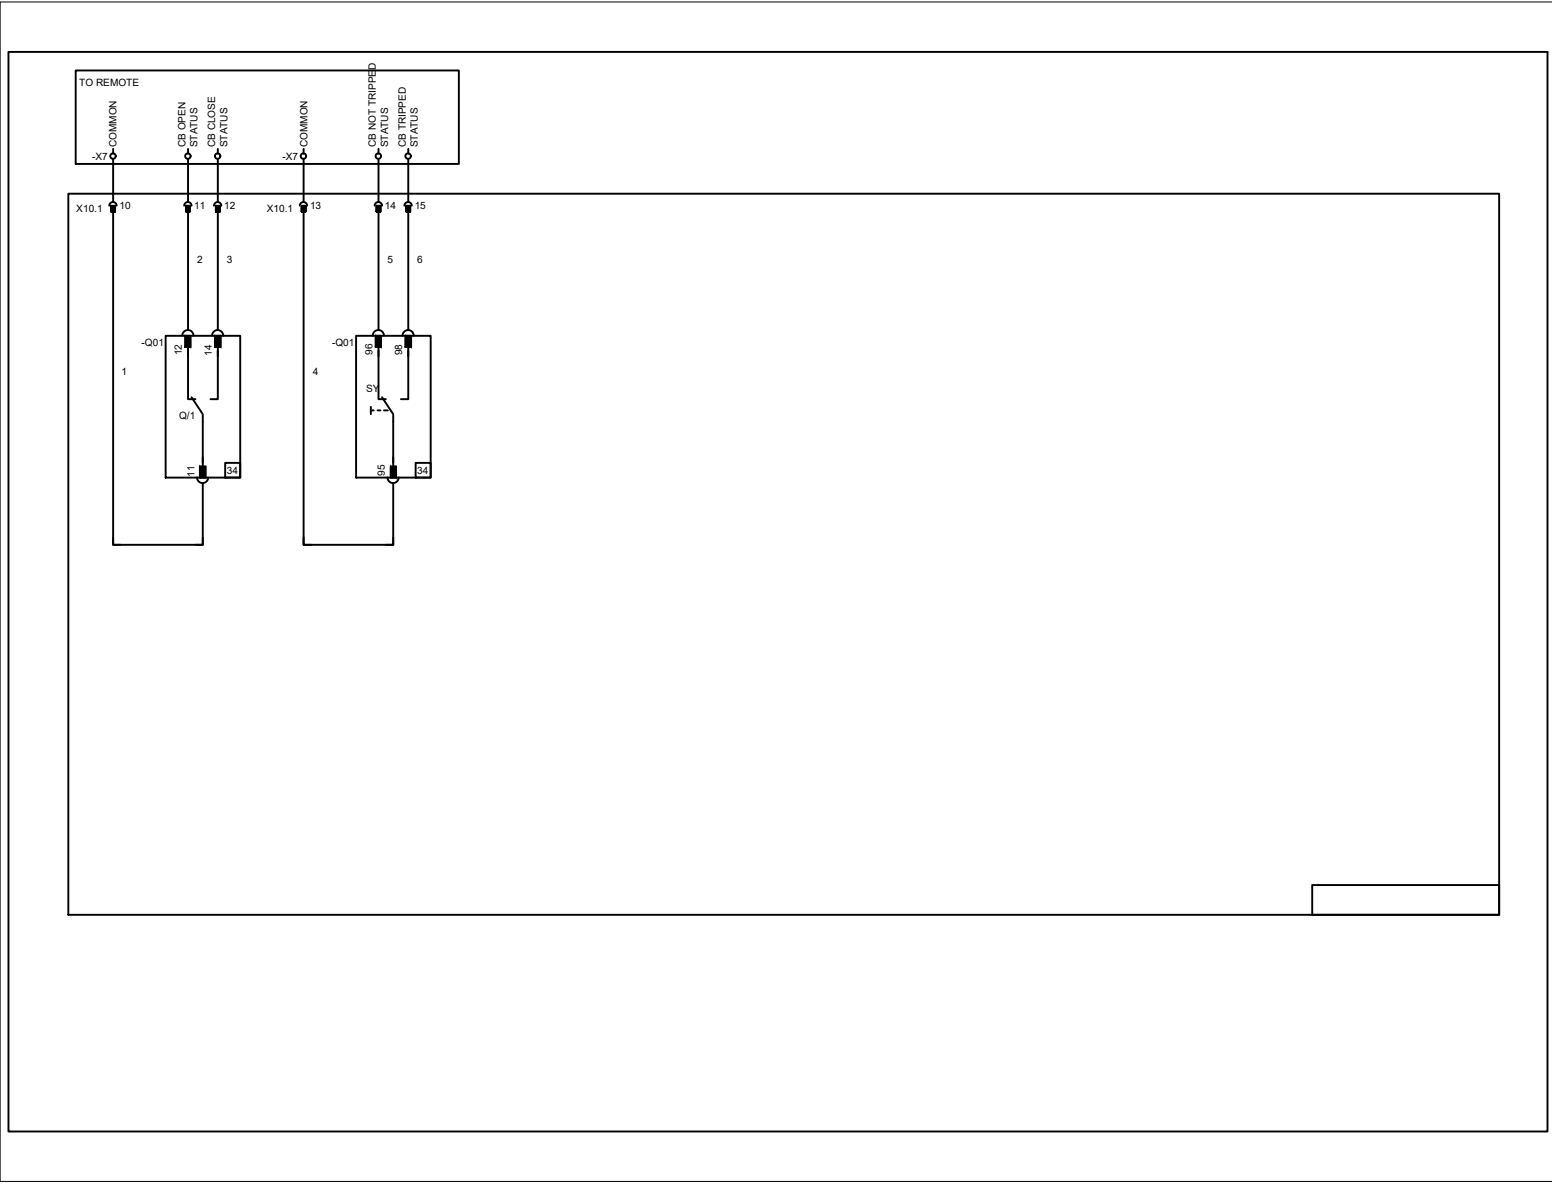













SV11 (Relay tripped)		95
	CB Open	X
Normal Sequence	CB Open	X
	CB Open	X
Trip Sequence (Trip caused by: YO, Trip Test)	CB Open	X
	CB Trip	X
	CB Reset	X
	CB Open	X
Trip Sequence (Trip caused by trip unit)	CB Open	X
	CB Trip	X
	CB Reset	X

-Q01	
CONTACTS	11
	12 14
FUNCTION	
ON	X
OFF	X
TEST	X
WITHDRAW	X
ISOLATED POS.	

X INDICATES CLOSED CONTACT.
CONTACTS ARE MAINTAINED



SPARE TEMINAL

-X10.1	 16	 17	 18	 19	 20	 21	 22	 23	 24	 25	 26	 27	 28	 29
--------	--	--	--	--	--	--	--	--	--	--	--	--	--	--